

MusiCall

User manual

MAX 8.8 – MAX8.8D
MAX8.16 – MAX8.16D

DATEQ
audio technologies

Notes

Safety instructions

- 1 All safety instructions, warnings and operating instructions must be read first.
- 2 All warnings on the equipment must be heeded.
- 3 The operating instructions must be followed.
- 4 Keep the operating instructions for future reference.
- 5 The equipment may never be used in the immediate vicinity of water; make sure that water and damp cannot get into the equipment.
- 6 The equipment may only be installed or fitted in accordance with the manufacturers recommendations.
- 7 The equipment must be installed or fitted such that good ventilation is not obstructed in any way.
- 8 The equipment may never be installed in the immediate vicinity of sources of heat, such as parts of heating units, boilers, and other equipment which generates heat (including amplifiers).
- 9 Connect the equipment to a power supply of the correct voltage, using only the cables recommended by the manufacturer, as specified in the operating instructions and/or shown on the connection side of the equipment.
- 10 The equipment may only be connected to a legally approved earthened mains power supply.
- 11 The power cable or power cord must be positioned such that it cannot be walked on in normal use, and objects which might damage the cable or cord cannot be placed on it or against it. Special attention must be paid to the point at which the cable is attached to the equipment and where the cable is connected to the power supply.
- 12 Ensure that foreign objects and liquids cannot get into the equipment.
- 13 The equipment must be cleaned using the method recommended by the manufacturer.
- 14 If the equipment is not being used for a prolonged period, the power cable or power cord should be disconnected from the power supply.
- 15 In all cases where there is a risk, following an incident, that the equipment could be unsafe, such as:
 - if the power cable or power cord has been damaged
 - if foreign objects or liquids (including water) have entered the equipment
 - if the equipment has suffered a fall or the casing has been damaged
 - if a change in the performance of the equipment is noticedit must be checked by appropriately qualified technical staff.
- 16 The user may not carry out any work on the equipment other than that specified in the operating instructions.

Introduction

MusiCall central matrix



The MusiCall paging system is an audio distribution system, capable of distributing multiple sources into 8 or up to 16 independent zones. Using the control units (MRC) or the internal webpage, each zone can remotely select its own audio source and volume setting.

Matrix models

The MAX series matrices are available in four models.

The MAX8.8 is the standard central matrix. Model with 8 stereo/mono zones, 8 stereo/16 mono RCA inputs and optional 8 local audio inputs. Each can be equipped with its own MRC wall controller and MRA local audio input. Configuration and control possible using the internal webserver.



Musical MAX8.8

The MAX8.8D is the DAB+ central matrix equipped with a quadruple DAB+/FM and WEB tuner. Model with 8 stereo/mono zones, 3 stereo/6 mono RCA inputs and optional 8 local audio inputs. Each can be equipped with its own MRC wall controller and MRA local audio input. Configuration and control possible using the internal webserver.



Musical MAX8.8D

The MAX8.16 is the standard central matrix. Model with 8 stereo/16mono zones, 8 stereo/16 mono RCA inputs and optional 16 local audio inputs. Each can be equipped with its own MRC wall controller and MRA local audio input. Configuration and control possible using the internal webserver.



Musical MAX8.16

De MAX8.16D is the DAB+ central matrix equipped with a quadruple DAB+/FM and WEB tuner. Model with 8 stereo/16mono zones, 3 stereo/6 mono RCA inputs and optional 16 local audio inputs. Each can be equipped with its own MRC wall controller and MRA local audio input. Configuration and control possible using the internal webserver.



Musical MAX8.16D

Matrix connections




Audio inputs

The Matrix allows to connect several audio inputs like CD players, MP3 players, computers or satellite receivers.



Zone control

To control the different audio zones wall controllers can be connected to the matrix. Using these controllers each zone can select an audio source and set its desired volume. Further more two paging consoles can be connected.

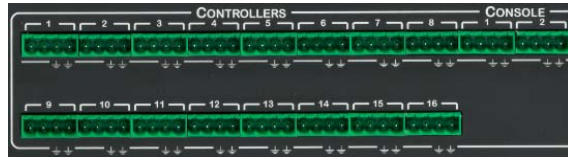


Audio outputs

The audio outputs are standard unbalanced line level signal. These outputs can be used to connect the (distribution) amplifiers for each zone. Using 100 volt amplifiers multiple speakers can be connected to a single zone.




Remote inputs

 Each matrix has five remote connections and a priority telephone/audio input. Three inputs can be used to activate room combining. One input can be used to activate the priority audio input. The last input can be used to connect an external system mute for fire alert and evacuation purposes. The telephone/audio input can be configured to auto answer or audio detect.



Logic IO

 Using the logic IO paging can be remotely activated. The logic outputs can be configured to externally activate signals or relays. The I/O connection can be set to groups 1...8 or 9...16.



Configuration

The matrix can easily be configured and controlled using a computer or tablet. For this the MAX matrix must be connected to the local LAN network (Ethernet).



Using the RS232 communication port external home automation can be connected. The USB connection is available for service purposes only.

Link

Through the link interface multiple MAX8.16 and 8.16D matrices can be connected making paging possible through out the complete system.



User control

Wallunits




MRC3 – MRC4

The wallunits are placed into the different rooms (zones) and are connected using a two wire connection to the matrix. The wallunits are placed into a standard flush box (MRC3) or can be mounted onto the wall (MRC4). Using these wallunits users can access volume control and audio source selection.



MRA1 – MRA2

When using an local audio input in a zone a microphone, CD player or laptop can be connected to the matrix. By pressing 'Channel +' and 'Channel -' on the wallunit, the local audio input is automatically selected. The local audio input can also be made 'public' available for use through out all zones.

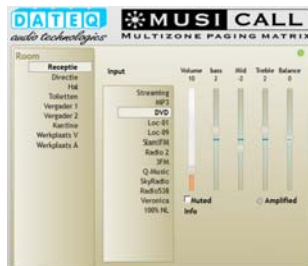

WEB

The MAX matrices offer full control over IP using the internal webserver. Users can access the individual zone page or global control all zones. The interface allows audio source selection, volume control and EQ settings. Zones can be locked for webcontrol using a simple four digit code.

The internal webpage can be accessed using <http://musicall> or by entering the IP address of your matrix into the webbrowser. Individual zones can be reached by <http://musicall/nameofzone> or by entering [http://\[matrixIP\]/nameofzone](http://[matrixIP]/nameofzone).

Consoles



MPC8 – MPC16

The paging console are used to address individual zones or groups of zones. These groups can be programmed using the paging console. The console is connected to the matrix using a four wire link.




None of the MusiCall controllers, consoles or audio inputs need external power supply. All power is supplied through the MAX matrix.

Control

MRC

WallUnits

The audio source for a zone can be selected by pressing 'channel +' or 'channel -'. The number of sources and sequence depends on the matrix configuration. By pressing the 'channel +' and 'channel -' simultaneously, the local audio input will be selected.

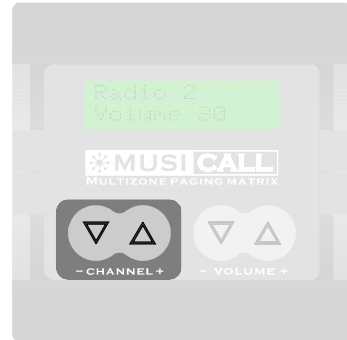

Adjusting the volume for a zone is done by pressing 'volume +' or volume -'. By holding the button, volume can be increased or decreased. Pressing both + and - buttons at the same time will mute the zone. Paging to the zone is always available.




- When room combining is active slave zones are not able to select the audio source. Setting the source is only available for the master zone. Slave zones do have the possibility to adjust volume.
- On the MAX8.8D en MAX8.16D RDS or meta data can be sent to the wallunit displays.

Local audio input

MRA

Using the local audio input MRA1 or MRA2 an external audio source like an MP3 player, microphone, laptop or mixing desk can be added to the system. The MRA1 is equipped with a balanced audio input on XLR. This way a microphone can easily be connected. For connecting a CD player or other RCA sources a conversion cable must be connected.

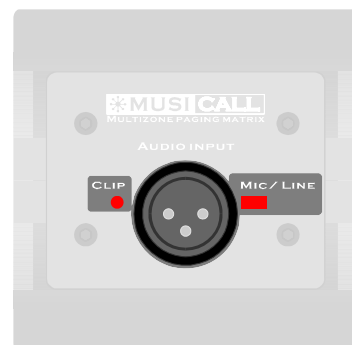


Using the Mic/Line switch the input sensitivity can be adjusted. Set is to line when line level signal is present. The MRA2 is equipped with both balanced XLR and RCA line level inputs. Each input can be independently adjusted making a small mix between line and microphone on the same input.

The Clip/Ovl LED will blink on overloading the input signal.

Consoles

Paging zones

Each button contains a zone or number of zones that can be changed using the configuration website. On addressing a zone, the LED turns red. At this point the 'chime' is heard. On the LED turning green, a voice call can be made. On releasing the zone button the zone returns in the state it was before paging started.

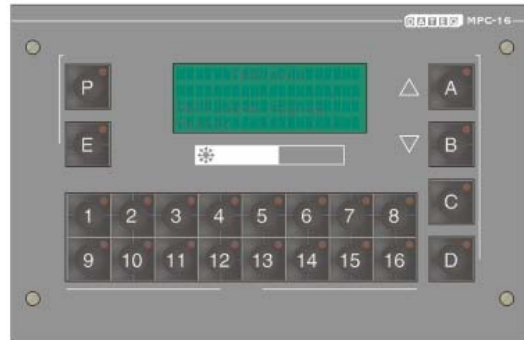

- In case room combining is active and a slave zone is addressed but not the master zone paging will not be active in that specific slave zone.
- In case room combining is active and a master zone is addressed all slave zones will be addressed too.
- Paging to a zone will always be active even when a zone is set to silence.
- Paging will not be active when a system mute by fire alert or evacuation is active.

Adjusting configuration

Using the console group paging can be set and adjusted. Programming through the paging console only groups A, B, C and D are available. Groups 1...8 or 1...16 can only be changed using the configuration pages. By default these groups are set to zone 1...16.

Entering the programming menu.

Press the 'P' key to enter the programming menu.

The programming screen will appear. By default the programming menu will start in group 'A'. Select the group that needs to be changed.

In programming mode the buttons 1...16 indicate all zones. The green LED's indicate the active zones in the selected group. Zones can be added by pressing the zone buttons 1...16. In case a zone is selected stereo both zone outputs are automatically selected when adding the zone. Selected zones and groups are automatically saved into the matrix configuration.

Existing paging groups can later on easily be changed by pressing one of the group buttons. All zones within the selected Group will light up green. By pressing the buttons 1...16 zones can be added or removed.

- A zone can be selected to one or more groups.
- Paging groups are automatically stored.
- Groups 1...16 can only be changed using the internal configuration webpage.
- Paging to the master of room combined zones are active in slave zones too.

DAB+ / FM QUAD Tuner

The MAX8.8D and MAX8.16D are equipped with a quadruple DAB+/FM and a single web stream tuner. Using the touch screen display control is made possible. Adding to the tuner functionality monitoring all sources through the headphone is made possible and vital information about the system can be reviewed.




Antenna

For use of the four tuners the system has to be connected to a CAI (Central Antenna Installation) or external outdoor antenna. For the use of DAB+ an external antenna is necessary when a CAI installation does not provide DAB+. When using the Web stream encoder the matrix needs to be connected to a local area network with internet access.



Booting

During the First 15 seconds after booting the boot screen logo will appear. During this time all available information about the matrix, setups, radio stations and web streams is loaded.

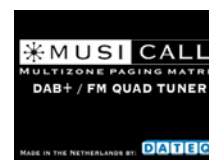

DAB+/FM tuner

Monitoring the tuner is made possible within the Tuner tab. The desired tuner can be selected. Switching between DAB+ and FM is only made possible within the configuration pages and can not be changed using the front panel display.



Adjusting the tuners frequency or preset will affect the zones that have selected the tuner as source.

Control

Using the front panel display all available stations and presets can be monitored.

| | | |
|--|-----------|--|
| | Seek down | The tuner will select the last in list radio station |
| | Previous | The tuner will select the previous preset |
| | Next | The tuner will select the next preset |
| | Seek up | The tuner will select the next radio station |
| | Signal | Signal strength for the selected tuner |

Web encoder

Within the Web tab all preset stream sources can be monitored. After selecting the desired web stream the encoder will connect to the stream server and monitoring can be done using the front panel headphone connection.



Adjusting the web stream source will affect all zones that have selected web stream as source.

Control

Using the front panel display all pre configured web streams can be monitored.

| | | |
|--|----------|------------------------|
| | Previous | Select previous preset |
| | Stop | Stop playout |
| | Play | Start playout |
| | Next | Select next preset |

MAX Matrix

Within the MAX tab all available audio sources within the MAX Matrix can be monitored. Using the monitor functionality all sources can easily be adjusted during installation or trouble shooting purposes.



During monitoring the MAX sources the audio outputs 8A (zone 8) and 8B (zone 16) are not available.

Control

Using the front panel display all available matrix sources can be monitored.

| | | |
|--|----------|---|
| | Previous | Select previous audio source |
| | Stop | Stop monitoring and release zone 8 and 16 |
| | Monitor | Start monitoring and Block zone 8 and 16 |
| | Next | Select next source |

Technical Specifications

AUDIO INPUTS INPUT 1...8

| | |
|-------------------------------|------------------|
| Signal level | 0 dBu |
| Impedance | 10 kOhm |
| Input noise | < -78 dB (IHF-A) |
| Crosstalk between inputs..... | < -72 dB @ 1kHz |
| Input attenuators | -32 dB |
| Headroom | 44 dB |

AUDIO OUTPUTS OUTPUT 1...16

| | |
|-------------------------------|-------------------------|
| Signallevel | 0 dBu |
| Impedance | 150 Ohm |
| Main volume adjust..... | +12...-60 dB |
| Output volume adjustment..... | +12...-60 dB |
| THD+N..... | 0.08% (CCIR-RMS) @ 0dBu |

FREQUENCY RESPONCE

| | |
|----------------------|------------------------|
| Input to output..... | 25 Hz...25 kHz (-1 dB) |
|----------------------|------------------------|

WALLUNIT CONNECTION

| | |
|------------------------------|----------------------|
| Output voltage | 24V |
| Maximum output current | 20mA, automatic fuse |

CONSOLE CONNECTORS

| | |
|------------------------------|-----------------------|
| Output voltage | 24V |
| Maximum output current | 200mA, automatic fuse |

COMMUNICATION

| | |
|----------------------|------------------------|
| Baudrate RS232 | 14kbps |
| USB | USB2 |
| Ethernet | 10/100MBit auto select |

GENERAL

| | |
|---------------------|-----------------------------|
| Mains supply | |
| Input voltage | 110 - 230 VAC +/-10%/ 50 Hz |
| Power..... | 70 W |

DIMENSIONS

Central unit

| | |
|-------------|--------------------------------|
| Front | 483 x 132 mm (B x H)= 19", 3HE |
| Depth | 215 mm |

| | |
|--------------|--------------|
| Weight | 5.3 kg Netto |
|--------------|--------------|

Product support

For questions about the MusiCall system, parts and other products you can contact your local dealer or:

Dateq Audio Technologies B.V.

De Paal 37
1351 JG Almere
The Netherlands

Telephone: 0031 36 54 72 222
Fax: 0031 36 53 17 776
E-mail: info@musicall.nl
Internet: www.musicall.nl